

Installation Manual





LevelPro® — SBF Series

Self-Aligning Bulkhead

SBF Self-Aligning Bulkhead Components



Installation Procedure

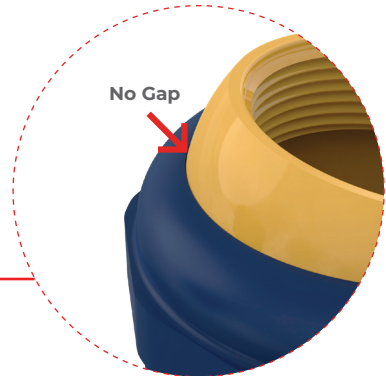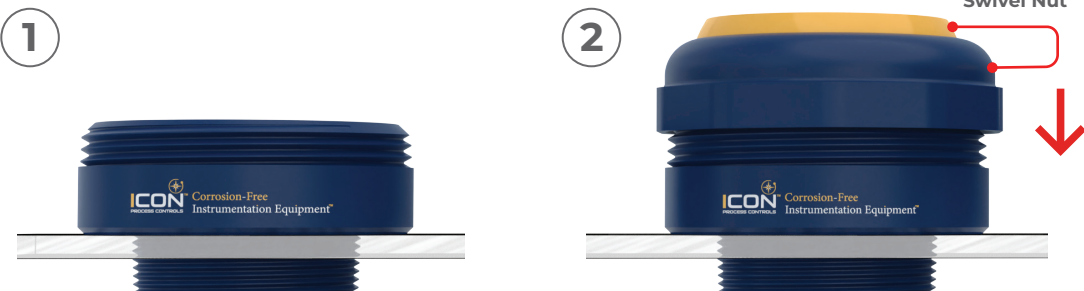

Ensure there is no gap between the swivel and swivel lock. The O-ring must be fully seated and hidden.

Note:

- ✓ Ensure Teflon tape is wrapped around the sensor threads before installing into the SBF fitting
- ✓ The swivel and swivel nut may feel tight as received from the factory. Push firmly to separate the two parts.